



KVM Switch control panel user manual

1. Connect the PC and KVM switch with RS232 cable or UTP cable. Power on KVM switch. Double click 'KVM Switch control panel.exe' to run control software on the PC.
2. Select the communication method, 'Serial control' is for RS232 cable connection, 'Network control' is for UTP cable connection;

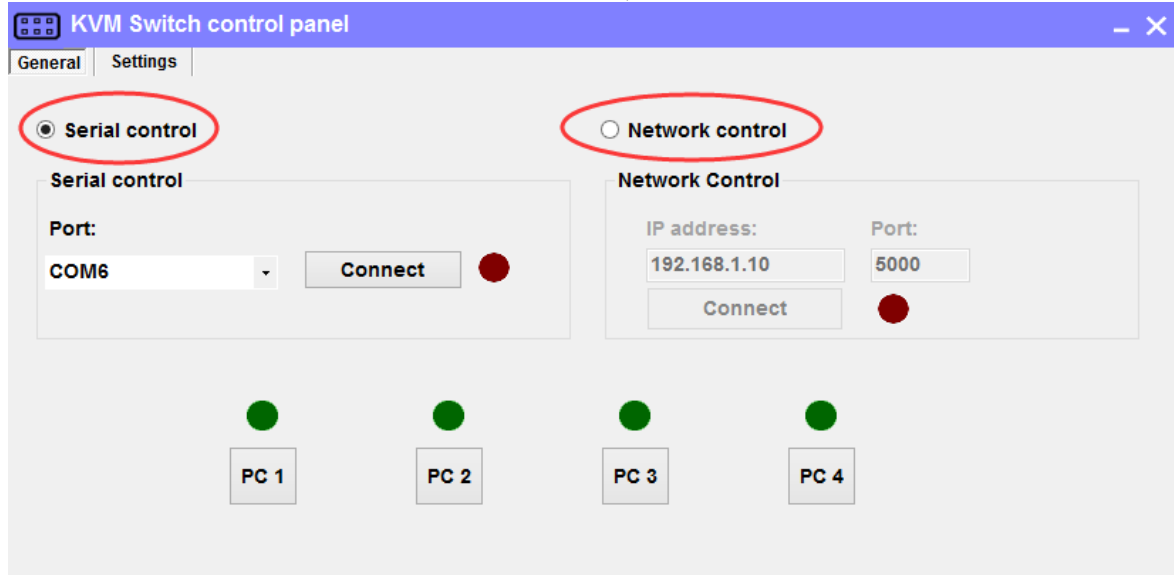


- 1). Network control:
 - a). Connect the control PC's ether net port and KVM network control port with UTP cable or make sure both are connected to the same router.
 - b). Setup IP address of the network adapter on the PC which running this software, make sure the IP address is between 192.168.1.2~192.168.1.254 but should not be 192.168.1.10. Please take the below setup picture for example.

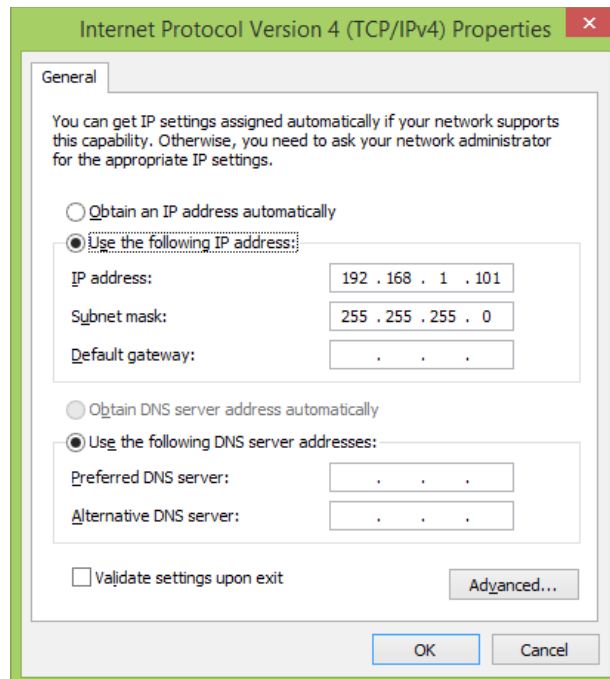

- c). Click button 'Connect' in network control section, the button will be changed to 'Connecting...', please wait for seconds, if succeed, the red indicator beside the button

will change to green. If failed, please check if the UTP cable is connected to the PC, the KVM is powered on and the IP address setting of the PC is correct.
After connected, press PC1/PC2/PC3/PC4 button to switch the PCs you want to control.

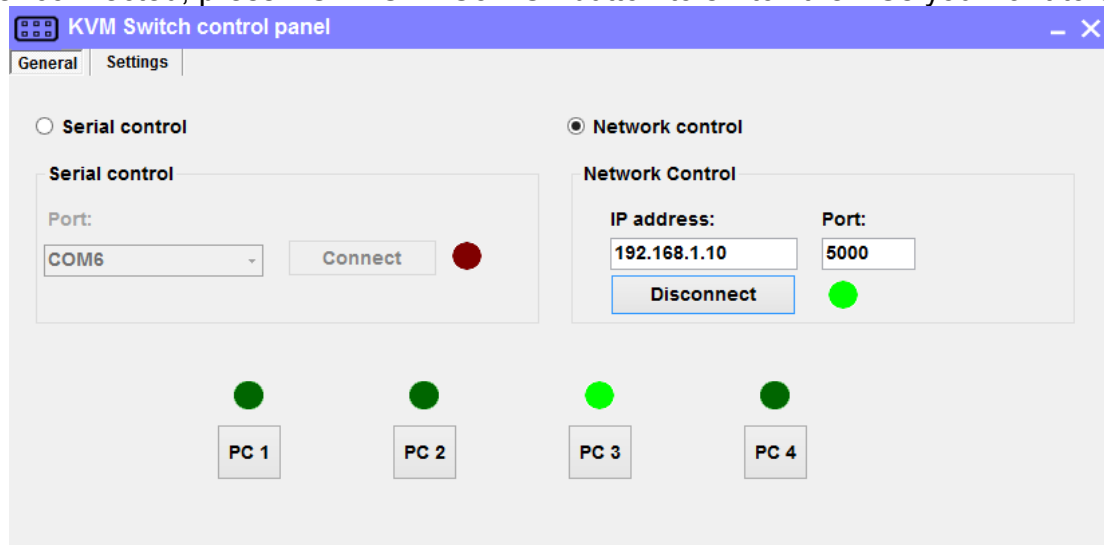

- 2). Serial control: Select the serial communication port number which connect to the KVM, then click 'Connect' to open the serial port and connect to KVM.
After connected, press PC1/PC2/PC3/PC4 button to switch the PCs you want to control.

