



How to change IP address of the matrix


1. Connect Matrix's LAN port to PC's LAN port with cat cable.
2. Follow below picture to change IP address setting of the PC, manually configure the IP address of the PC to the same subnet address as the matrix, for example the matrix's IP address is 192.168.1.10, then the PC's address should be set to 192.168.1.XXX

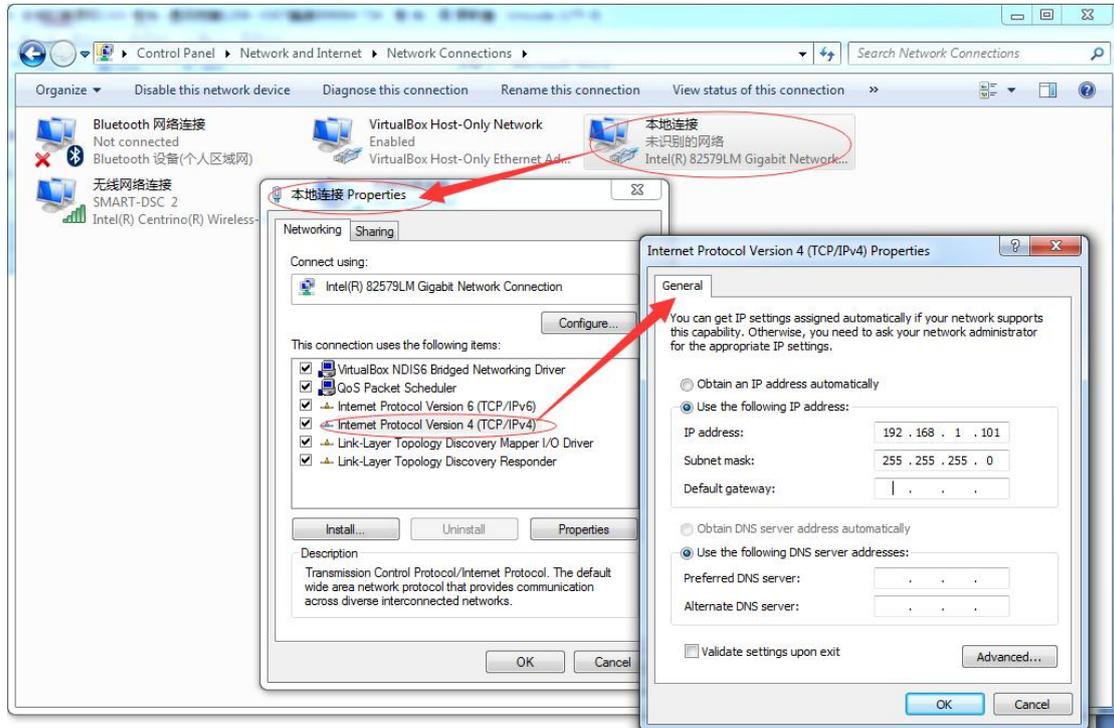

3. Run "MatrixControler.exe" application and choose "Network control", then click "Connect" button, wait a minute then the red indicator (by the side of the "Connect" button) will turn green. If not, that means the matrix is not connected. Please make sure the network cable is well connected. And the IP settings are correct.

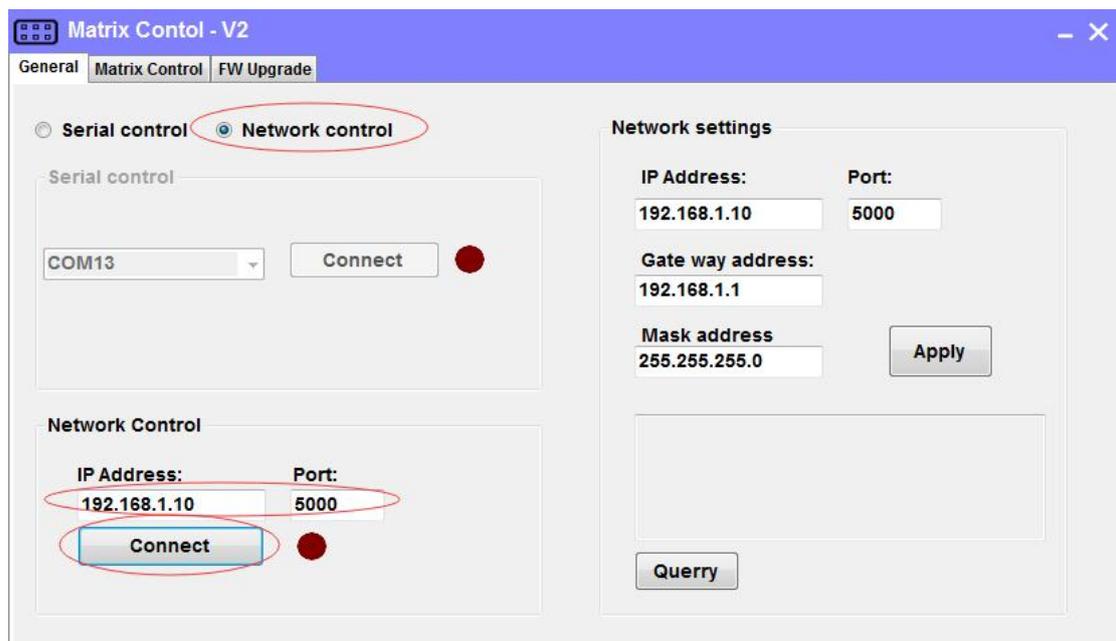


4. In "Network settings" area, modify the IP address settings as you want, but make sure IP Address and the Gate way address should be in same subnet. Then press "Apply" button to final submit the modification request. If succeed, the modified IP address will be displayed automatically on the information area. Power off and on again, the matrix will use new IP address.

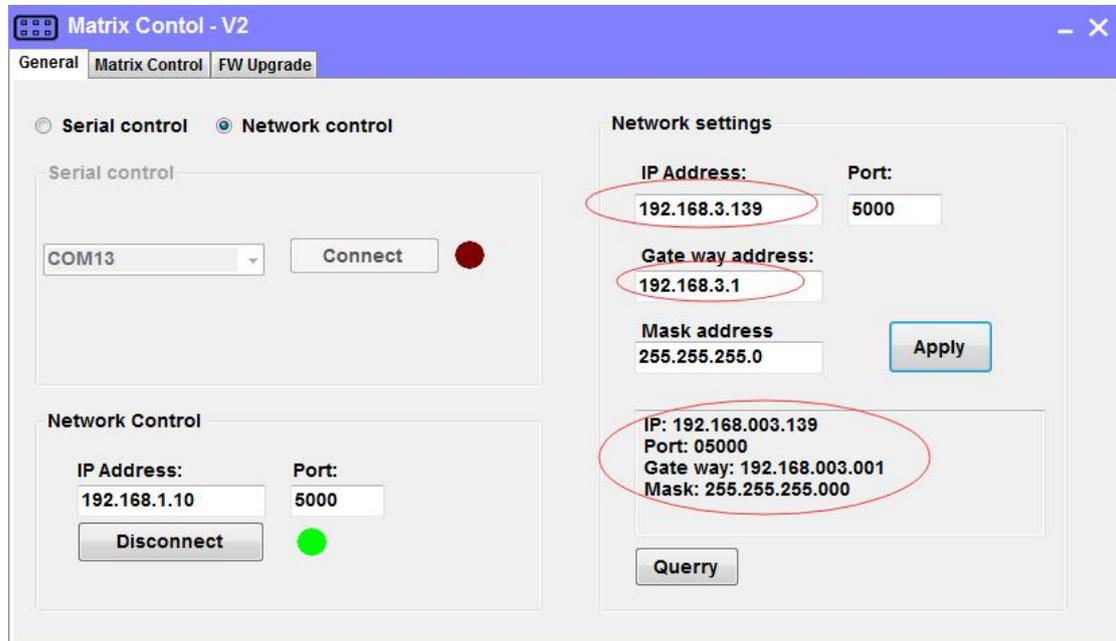


Firmware update procedure

1. After connected, select "FW upgrade" page.
2. Click button "Load..." and select FW file "HMA0404B40-SOFMU5-V1.1.0_enc.bin"

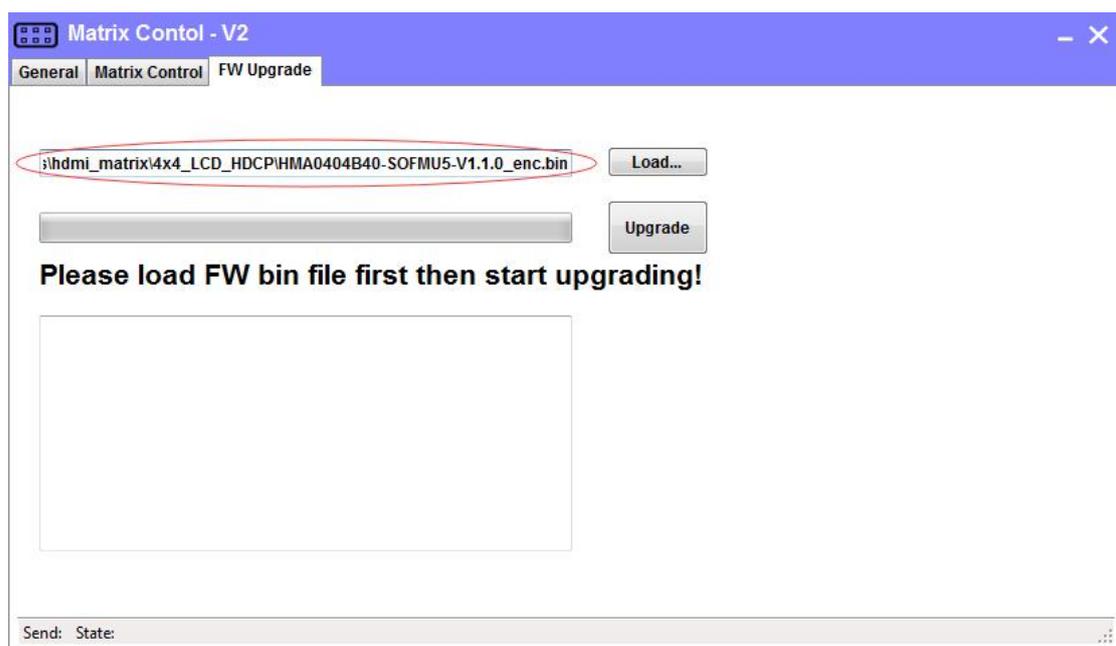

3. Click “Upgrade” and wait until you see below picture. (Do not power off the matrix or interrupt the upgrading.)

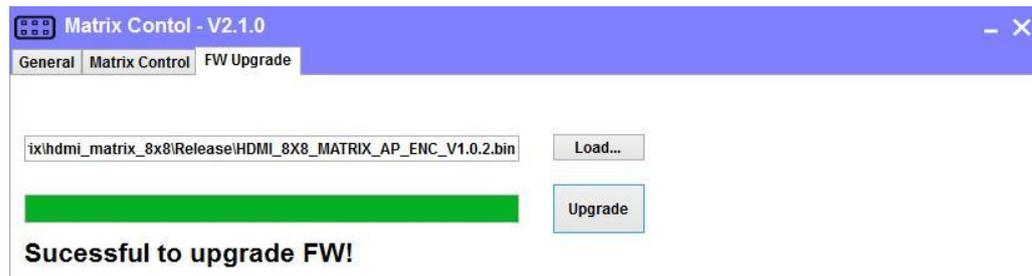

4. Unplug power cord of the matrix and plug again, you should get your matrix’s FW upgraded.