

TESmart

User Manual

2x2 DP Dual Monitor
KVM Switch



DKS202 Master 24

To Enjoy Smart

DKS202 Master 24

English



English

Preface

It's our great honor that you have chosen the KVM Switch produced by our company, Tesla Ele Technology Co.,Ltd. In this user manual, you will learn how to operate and use this product. Please read this user manual comprehensively before use. If you have any questions, comments or suggestions, please contact us via the following email:

support@tesmart.com.

Copyright Notice

The user manual, compiled by Tesla Elec Technology Co.,Ltd, shall not be duplicated or translated by any person or organizations without written permission. This user manual shall not be used for commodity transaction in any form or by any means (electronically, mechanically, photocopying or recording, etc.) or be used for any business practices or profitable activities. The ownership of the trade names and brand names adopted in this user manual belongs to their companies.

Product Information

For more information about TESmart products and how they can help you to enjoy your job, please visit the following TESmart website or contact an TESmart Authorized Reseller.

www.tesmart.com

Contents


1. Safety Tips and Warnings	01	9.4 EDID Emulator	
2. Battery Description.....	02	9.5 Mouse Wheel Switching	
3. Warranty Information.....	03	10. Operation Method.....	24
4. Preface.....	04	10.1 Front Panel Button Switching Method	
5. Features.....	05	10.2 IR Remote Control	
6. Packing List.....	06	10.3 Keyboard Hot Keys	
7. Panel Description.....	07	11. Change Hot Key Combination.....	32
8. Connection Description.....	11		
8.1 Connection Diagram			
8.2 Connection Preparation			
8.3 Connection Steps			
8.4 KVM Workbench			
9. Function Description.....	18		
9.1 Display Mode Description			
9.2 Keyboard and Mouse Emulation Mode			
9.3 Built-in Network Switch			

1. Safety Tips and Warnings

Tips: Please read the safety tips and warnings for dual monitor KVM Switch comprehensively before use. Use this product in accordance with its instructions, safety tips and warnings to prevent unnecessary damage to the product and potential dangers to users.

- ⚠ Keep the product away from water.
- ⚠ Clean the product with dry cloth.
- ⚠ Use the product in accordance with its instructions and do not block its vents.
- ⚠ Keep the product away from ignition sources, such as heat sinks, heat accumulators, stovepipes and other heat production settings (including audio amplifiers).
- ⚠ Do not touch the product and the power cord with wet hands so as to lower the risk of electric shock and damage to the product. Do not let the product get wet or become damp.
- ⚠ Unplug the power supply of this product in thunderstorm days or when it has been not used for a long time.
- ⚠ Do not expose this product and its battery to open fire or overheating environment. Dispose the waste battery in accordance with instructions.
- ⚠ Users shall not remove and repair the product without authorization.

2. Battery Description

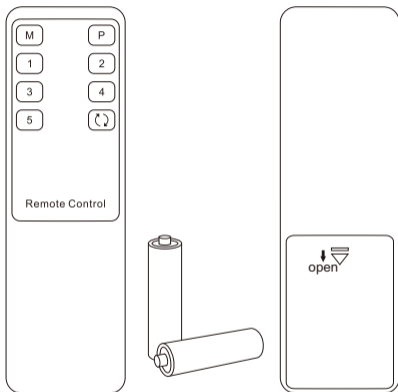

Tips: By default, the remote control is not equipped with batteries, due to the safety requirements of some express companies. Install AAA dry cells before use.

Caution: Improper disposal of the lithium battery may cause an explosion. Do not throw the battery into fire. Keep the battery away from children. Dispose the waste battery in accordance with local regulations.

3. Warranty Information

We warrant this product as free of defects in material and workmanship for a period of one (1) year from the date of shipment. If during the period of warranty this product proves defective under normal use, we will repair or replace this product, provided that this product has not been subjected to mechanical, electrical, or other abuse or modifications. If it fails under conditions other than those covered will be repaired at the current price of parts and labor in effect at the time of repair. Such repairs are warranted for six (6) months from the day of reshipment to the buyer.

4. Preface

Dear Users,

2x2 DP Dual Monitor KVM Switch can easily integrate cross-platform computer devices and greatly simplify the devices management. Support managing a dual-display multimedia workstation. If you connect 2 video ports of the same PC to 1 group of input ports on the KVM, you will realize 2-screen extended display or copy display. It has the same effect as connecting the PC directly to 2 displays. The KVM also supports displaying different PCs on 2 monitors.

This KVM support USB 3.2 Gen 1 with superspeed data transfer rate. The DisplayPort interface provides up to 8K@60Hz resolution that displays the most vivid high-definition images available while producing premium sounds. You can switch input ports with front panel button, IR signals, mouse wheel and keyboard hot keys. At the same time, the keyboard and mouse modes can greatly improve the KM compatibility.

Tips: If you need to control more computers or conduct more complex and professional switching, you can also choose other products of our company. For more details, please visit our official website: www.tesmart.com.

5. Features


- Using 2 monitors, 1 set of keyboard and mouse to control 2 computers
- Support resolution up to 8K(4320p)@60Hz and is backward compatible with 4K(2160p)@60Hz/120Hz/144Hz
- DisplayPort 1.4 compliant
- Support 2 display modes
- Support Unix/Windows/ Debian/ Ubuntu/Fedora/ MacOS X/ Raspbian/ Ubuntu for Raspberry Pi and other Linux based systems
- Support USB 3.2 Gen 1 with super-speed data transfer rate
- Support hot plug, disconnect or connect devices to the KVM at any time without turning off PC
- With EDID emulators in each input port, it can keep PCs always having correct display information
- Support IR signals, front panel button, mouse wheel and keyboard hot keys to control the KVM to switch input ports
- Keyboard and mouse support passthrough mode and legacy emulation mode, significantly improving compatibility for keyboards and mice

6. Packing List


- 1 * 2x2 DP Dual Monitor KVM Switch
- 2 * USB 3.0 Cables
- 4 * DP Cables
- 1 * IR Remote Control
- 1 * DC 12V Power Adapter
- 1 * User Manual

Tips: After receipt of the product, please check the packing list carefully to make sure that no components have been lost and no damage to the product has been caused during transportation. If you have any problem, please contact us at any time.


7. Panel Description

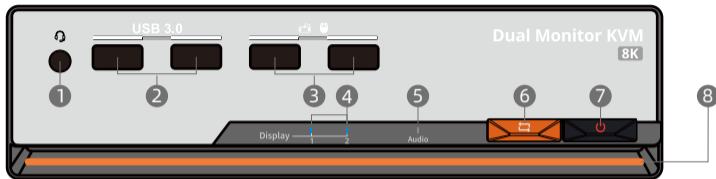


ID	Name	Function
1	3.5mm audio/mic	Integrated microphone and L/R audio output.
2	USB 3.2 Gen 1 ports	Connect to USB 3.0 device.
3	Keyboard and mouse input	For USB keyboard and mouse input.
4	Display status indicators	Display the current output status of each monitor.

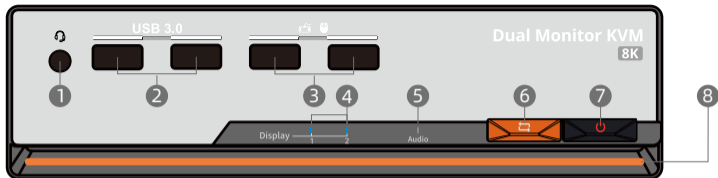

ID	Name	Function
5	Audio and USB 3.0 indicator	Indicate the current path of audio and USB 3.0.
6	Input selection button	Press to switch input sources.
7	Power switch	Press for about 2 seconds to turn on or turn off power supply.
8	RGB LED strip	Features 4 lighting modes to match your atmosphere. Please refer to page 31 for how to switch different modes.

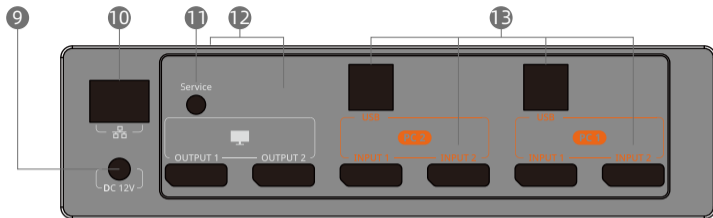


ID	Name	Function
9	DC 12V	12V DC power supply.
10	LAN port	Insert the network cable into this port to let the 2 input PCs to connect to the local network area.
11	IR extension in	Connect IR extension cable to this port to receive remote IR signal.

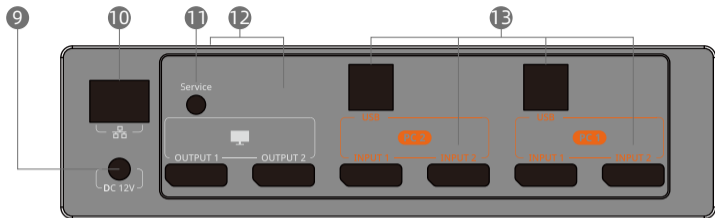

ID	Name	Function
12	DP outputs	Connect to 2 DP displays for video output.
13	KVM input ports group	2 PCs can be connected to the KVM at the same time. Each group contains 2 DP ports(marked as Input 1/2) and a USB port. Connect the ports to corresponding input devices for signal input.


8. Connection Description

8.1 Connection Diagram

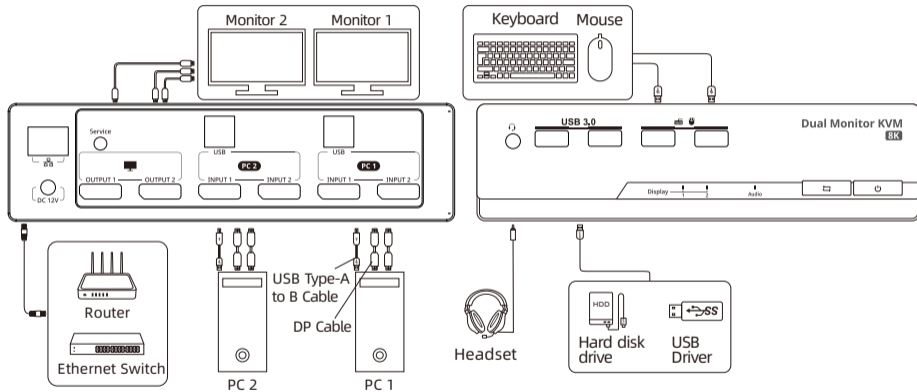

8.2 Connection Preparation

- Take into consideration all devices required to be connected and prepare a workbench large enough before the connection.
- Lay out the cables properly to facilitate the layout of power supply as a lot of power sockets and plug boards will be adopted in connection.
- Prepare different sticker labels to mark cables as a lot of cables will be adopted in connection.

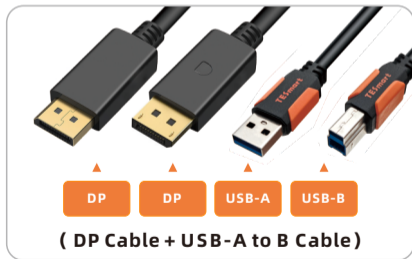

8.3 Connection Steps


1. Connect PC1 with 1 USB-A to B cable and 2 DP cable, connect PC1 to the DP ports group on the KVM, use USB-A end to connect each PC and USB-B end to connect the KVM. Connect PC2 in the same way.



2. Connect KVM's DP output ports to 2 DP displays with 2 DP cables.



3. Connect external mouse and keyboard to KVM's keyboard and mouse input port.




Tips: For the normal service of hotkeys, we recommend you use the full-key external keyboard with a separate **[Scroll Lock]** key (as shown above).

4. Connect USB 3.0 devices to KVM's standard USB 3.0 ports.



5. Connect external audio device to KVM's L/R out port.

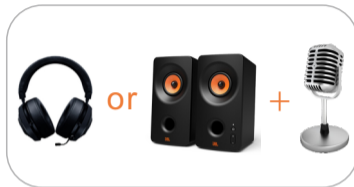

6. Use 1 network cable, one end is connected to the RJ45 port, the other end is connected to a switch or a router.



7. Connect the power cable to KVM's DC 12V port and plug it to a power socket.



8. By now, the connection has been completed. Turn on the power supply and the KVM Switch will begin to work.

Tips: By default, the network cable is not included in the package.

8.4 KVM Workbench

A workbench with 2x2 DP Dual Monitor KVM Switch successfully connected is shown as below:




9. Function Description

9.1 Display Mode Description


The 2x2 DP dual monitor KVM Switch support 2 display modes. You can choose to implement 2-screen extended display or duplicate display or display different PCs on 2 monitors.

Display Mode 1: Display the same PC

Duplicate displays

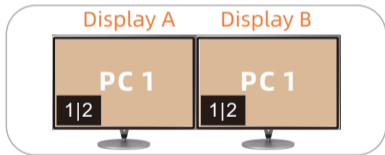


Extend displays

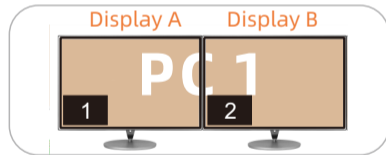

- Tips:**
1. You can set the duplicate or extend displays in the Display Settings of the current selected PC.
 2. Only when 2 video ports of the same PC are connected to Input 1 and Input 2 of a group of input ports at the same time, can duplication or expansion of two screens be realized.

Display Mode 2: Display the different PCs

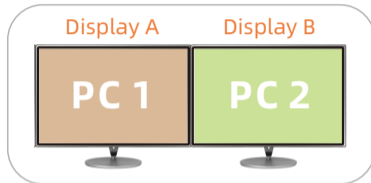

In this mode, you can show one PC on any two monitors connected to the KVM and the other PC on the remaining monitor. Use the front panel, hotkeys, or IR control to switch between PCs and monitors.

Tips: When different PCs are displayed on different monitors, you can double-click the **Right-[Alt]** on the keyboard connected to the KVM to switch the focus between different PCs.

9.2 Keyboard and Mouse Emulation Mode

We provide two keyboard and mouse modes: Pass Through Mode and Legacy Emulation Mode. Pass Through mode supports most keyboard and mouse drivers and multifunction keyboards and mice. Legacy Emulation Mode ensures the normal functioning of the keyboard, mouse, and hotkey features.

- Typically, we recommend using Passthrough Mode for an optimal user experience, allowing you to:




If you encounter issues with the keyboard and mouse in Passthrough Mode, we recommend switching to Legacy Emulation Mode.

- Tips:**
1. To toggle between two modes, please refer to Page 28. After toggled, please restart the KVM.
 2. In Legacy Emulation Mode, the keyboard and mouse control software will no longer be available.

9.3 Built-in Network Switch


The 2x2 KVM Switch have a built-in USB Ethernet Adapter, which adds a standard RJ45 port to all the PC that is connected to the KVM and allows you to connect your computers to a router or network switch for gigabit wired network connection. Full 1000Mbps Ethernet for fast, stable data transfer, more reliable than most wireless connections. This feature has been added with a switch, allowing you to freely choose to enable or disable it.

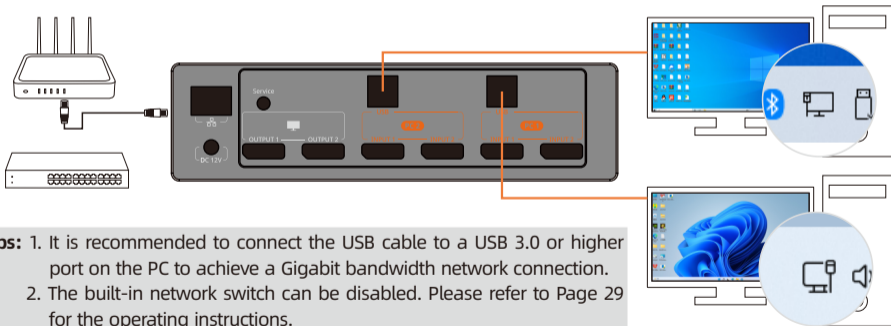

- Tips:**
1. It is recommended to connect the USB cable to a USB 3.0 or higher port on the PC to achieve a Gigabit bandwidth network connection.
 2. The built-in network switch can be disabled. Please refer to Page 29 for the operating instructions.

9.4 EDID Emulator

Our 2x2 DP KVM Switch with EDID emulators in each input port, keeping PCs always having correct display information. And the KVM will maintain EDID before and after switching, ensure that the window you open stays in the fixed place. Use the hot key command can enable or disable EDID emulators. The EDID emulators are enabled by default.

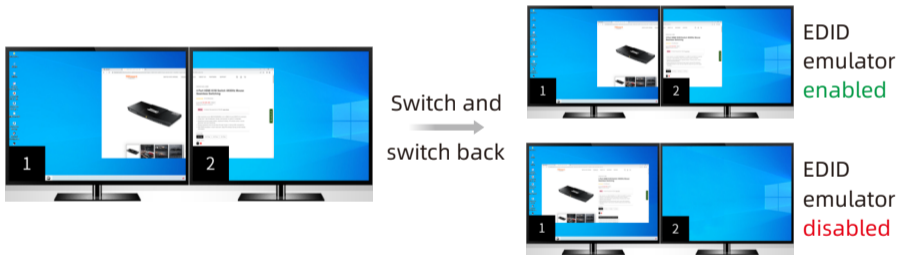

Tips: 1. For your better experience, please keep the EDID emulator enabled. If you encounter some display issues when using the KVM, please disable the EDID emulator and try again.
2. The EDID emulator can be disabled. Please refer to Page 29 for the operating instructions.

9.5 Mouse Wheel Switching

Mouse wheel switching method can quickly switch input sources by mouse operation, double-click the mouse wheel to switch to the next input port. Mouse wheel switching mode is off by default. You can use keyboard hotkey command to turn on mouse wheel switching mode. Please refer to Page 29.



10. Operation Method


10.1 Front Panel Button Switching Method

The 2x2 DP dual monitor KVM Switch can switch to any input devices at any time with front panel keypad, IR remote control and keyboard hot keys. You can choose your favorite switching method according to your personal needs and habits.



- The blue light indicates PC1 and the green light indicates PC2.
- Press [] button to switch between PCs on display mode 1.

10.2 IR Remote Control

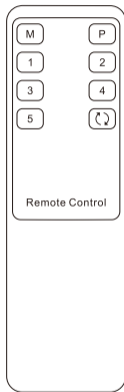

- M** — Switch images on the Display A
- P** — Switch images on the Display B
- 1** — Switch both monitor to display PC 1
- 2** — Switch both monitor to display PC 2
- ⏏** — Turn off/on buzzer sound

Tips: Unspecified buttons at above are non-functional.

10.3 Keyboard Hot Keys

- Use external keyboard hot keys to switch the input source or set up some other functions..

Tips: The keyboard hot keys can only work with external keyboard correctly connected to the keyboard and mouse input port of the KVM.

After press **[Right-Ctrl]** key twice within 2 seconds then please enter the commands within 3 seconds and the KVM will execute the corresponding commands.

Select previous input port:

[Right-Ctrl]→[Right-Ctrl]→[PgUp]



Select next input port:

[Right-Ctrl]→[Right-Ctrl]→[PgDn]



Select port by port number(i.e. display mode 1):

[Right-Ctrl]→[Right-Ctrl]→[1]~[2]



Switch PCs on different monitors separately(i.e. display mode 2):

Monitor 1: [Right-Ctrl] → [Right-Ctrl] → [←]



Monitor 2: [Right-Ctrl] → [Right-Ctrl] → [→]



Switch keyboard and mouse focus in display mode 2:

[Right-Alt] → [Right-Alt]



Disable/enable follow mode:

Tips: "Follow Mode" refers to whether the audio devices and USB 3.0 devices connected to the front panel will switch synchronously with the keyboard and mouse focus when switching.

[Right-Ctrl] → [Right-Ctrl] → [~]



Tips: The default setting of follow mode is enabled. When you disable it, the buzzer will emit only 1 short beep; when enable it, the buzzer will emit 2 short beeps.

When Follow Mode is disabled, you can use the following hotkeys to switch audio and USB 3.0 channels between PCs:

[Right-Ctrl] → [Right-Ctrl] → [0]



Toggle between keyboard and mouse modes:

[Right-Ctrl] → [Right-Ctrl] → [F2]



Tips: The default keyboard and mouse mode is Pass Through mode. When switching to Compatibility Mode, the buzzer will emit 2 short beeps; when switching to Pass Through Mode, the buzzer will emit only 1 short beep.

Disable/enable built-in network card:
[Right-Ctrl] → [Right-Ctrl] → [F4]



Tips: The built-in network card is enabled by default. Enable it will trigger the buzzer to beep twice and disable it will trigger the buzzer to beep once.

Disable/enable EDID emulator:
[Right-Ctrl] → [Right-Ctrl] → [F5]



Tips: The EDID emulator is enabled by default. Enable it will trigger the buzzer to beep twice and disable it will trigger the buzzer to beep once.

Turn on/off mouse wheel switching mode:
[Right-Ctrl] → [Right-Ctrl] → [F6]



Tips: Turning on the mouse wheel switching mode will trigger the buzzer to beep twice and turning it off will trigger the buzzer to beep once.

Disable or enable buzzer sound:
[Right-Ctrl] → [Right-Ctrl] → [F11]



Tips: The default setting of buzzer sound is enabled. Repeat this step to disable or enable buzzer sound.

Switch lighting modes:

Turn off lighting:

[Right-Ctrl] → [Right-Ctrl] → [L] → [0]



Light effects vary with KVM indicators:

[Right-Ctrl] → [Right-Ctrl] → [L] → [1]



Marquee lighting effect:

[Right-Ctrl] → [Right-Ctrl] → [L] → [2]



Orange breathing light:


[Right-Ctrl] → [Right-Ctrl] → [L] → [3]



11. Change Hot Key Combinations

For your convenience, we have built-in a custom hotkey function. By setting, you can use any key on the keyboard connected to the KVM as the trigger key for the hot key command. The default hotkey trigger key is the **[Right-CTRL]**. The custom hotkey function can be set in the following ways:

Method 1:

- After powering on the KVM, press and keep holding the [] button on the front panel for 10 seconds until you hear the buzzer is long beeping. When starting to set the trigger key, the buzzer will have a 5 seconds tone. Please press the key you want to use as the hot key trigger key on the keyboard within 5 seconds. After pressing the button, the prompt tone ends and the setting is complete.

Method 2:

- Press [Right-Ctrl]→[Right-Ctrl]→[F1], then the buzzer will have a 5 seconds tone. Please press the key you want to use as the hot key trigger key on the keyboard within 5 seconds. After pressing the button, the prompt tone ends and the setting is complete.



TESmart

To Enjoy Smart

DKS202 Master 24

Tesla Elec Technology Co.,Ltd

CE FC   HDCP 

WEEE-Reg.-Nr. DE 66784279